



#### **DESIGN FEATURES**

- For use in potable water distribution systems
- Easy Push to Connect supply stop
- Intuitive 1/4 turn on/off design
- 100% Leak tested
- Works with Copper, PEX, CPVC, and PE-RT piping
- 5 year limited warranty
- Made in the USA
- Industry standard universally accepted release design
- Packaged in quantities of 10

#### **MATERIAL SPECIFICATIONS**

- Chemical resistant engineered polymer. Excellent chemical, oxidation scaling, mineral buildup, and heat resistance.
- Chloramine resistant rubber components
- Patented Ultracore<sup>™</sup> hose liner with corrosion resistant PET braid.

#### **OPERATING SPECIFICATIONS**

- To turn On, rotate handle 1/4 turn until aligned with the outlet.
- To turn Off, rotate handle 1/4 turn until tip is perpendicular to the outlet direction
- Working Temperature: 40°-160°F
- Max working pressure 125 PSI



3689 Arrowhead Drive, Carson City, NV 89706 Phone (800) 854-3215 Fax (800) 243-1777 E-mail sales@lspproducts.com
Website www.lspproducts.com
Content matter is subject to change at any time. It is the user's responsibility to ensure the most updated revisions are obtained.

# Ultra-EZ Push-on Angle Stop Connector Specification Sheet

| Part<br>Number | Description  | Hose Length                                       | Usage      |  |  |
|----------------|--|---|------------|--|--|
| PV-DW160       | 1/2" Quick Connect x<br>3/8" Comp. w/ 3/4"<br>FGHT Elbow Adapter                 | 60″   | Dishwasher |  |  |
|                | Engineered Polymer<br>Push-On Valve  |   |            |  |  |
| PV-IM172       | 1/2" Quick Connect x<br>1/4" Comp. Hard<br>Cone Connection<br>Engineered Polymer | 72"   | Ice Maker  |  |  |
|                | Push-On Valve  |   |            |  |  |
| Accessories    |  |   |            |  |  |
| FTG-05-0380-L  |  | Dishwasher 3/8" NPT x 3/8" Comp.<br>Elbow Adapter |            |  |  |

## **CAUTION**

- Do NOT expose to flux, PVC/CPVC primers or glues, household cleaners, external heat sources, or corrosive materials
- Do not reuse valve once it has been installed and removed from a pipe.

## **COMPLIANCES/LISTINGS**

- IAPMO listed
  - ASME A112.18.1/CSA B125.1, ASSE 1061 (File # 4577 )
  - ASME A112.18.6/CSA B125.6 (File # 2111)
  - Lead Free Compliance (File #6545)
  - NSF/ANSI-61/9 (File # N-6614)
- NSF 61







#### **MAINTENANCE**

- Keep dry. Inspect every six months and replace immediately in the event of leaks, wear, discoloration, and any visible signs of corrosion.
- Do not clean with harsh household chemicals. Wipe clean with water and a clean cloth

| Product Submittal |          |  |  |
|-------------------|----------|--|--|
| Job Name:         |          |  |  |
| Date:             |          |  |  |
| Part Number       | Quantity |  |  |
|                   |          |  |  |
|                   |          |  |  |
|                   |          |  |  |
| Architect:        |          |  |  |
| Contractor:       |          |  |  |





# Ultra-EZ Push-on Angle Stop Connector Specification Sheet


# INSTALLATION INSTRUCTIONS


- 1. Cut 1/2" stub out pipe no less than 2-1/2" from the wall. End should be square. To prevent leaks, ensure pipe (ESPECIALLY COPPER) surface is free of burrs, scratches or other damages.
- 2. Install escutcheon onto pipe and press against wall.
- 3. Install spare metal grab ring onto pipe and push completely against escutcheon.
- 4. Mark the pipe at a depth of 1-3/8", place the notch on the back of the valve flush with the end of the pipe and mark pipe.
- 5. Push the valve onto the pipe until the bottom of valve has passed the marking on the pipe. Do not use pipe dope or expose to flux or CPVC/PVC Cements or Primers. When installing a hose, hand tighten nuts plus 1/4 turn with a wrench. **DO NOT USE A HARD CONE CONNECTION. DO NOT OVER TIGHTEN.**
- 6. Connect hose to appliance. Do not twist, kink, crush, or pull line up against valve or connection fitting.
- 7. After installation, pressure test and check for leaks prior to leaving site.



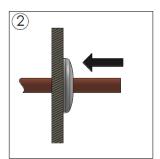

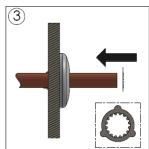

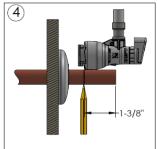

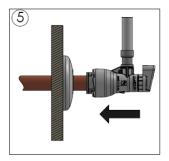

# **REMOVAL INSTRUCTIONS**

- 1. Turn off water main.
- 2. Remove the small retaining clip on the bottom of the valve with needle-nose pliers or a flat head screwdriver.
- Place the end of LSP part number OBPS-TOOL-1, or a 5/8" wrench against the release collar or other device/tool over the pipe below/ behind the valve.
- 4. Pull the tool against the release collar to release the internal teeth of the valve, then pull the valve off the pipe.
- 5. DO NOT REUSE ONCE REMOVED FROM A PIPE.



3689 Arrowhead Drive, Carson City, NV 89706 Phone (800) 854-3215 Fax (800) 243-1777 E-mail sales@lspproducts.com
Website www.lspproducts.com
Content matter is subject to change at any time. It is the user's responsibility to ensure the most updated revisions are obtained.

| Product Submittal |          |  |  |
|-------------------|----------|--|--|
| Job Name:         |          |  |  |
| Date:             |          |  |  |
| Part Number       | Quantity |  |  |
|                   |          |  |  |
|                   |          |  |  |
|                   |          |  |  |
| Architect:        |          |  |  |
| Contractor:       |          |  |  |