

REFER TO DRAWING #9938-375-001 TO INSTALL -MP1 WALL MOUNTING PLATE.

- A-ROUGH-IN WASTE AND SUPPLY LINES DURING -MP1 (1) INSTALLATION OR PRIOR TO MOUNTING FIXTURE.
- B-CAREFULLY REMOVE FIXTURE FROM PACKING MATERIAL AND COVER TO PREVENT SCRATCHING OR DAMAGE.
- C-SEPARATE ACCESS PANEL 2 FROM HOUSING AND INSPECT FIXTURE TO ENSURE ALL TUBING CONNECTIONS, BUBBLERS AND PUSHBUTTONS HAVE NOT BECOME LOOSE DURING SHIPPING. CORRECT IF NECESSARY.
- D-ALIGN FIXTURE MOUNTING POINTS WITH STUDS (3) AND SLIDE FIXTURE TO FINISHED WALL. FIX WITH NUTS AND WASHERS PROVIDED (4).


- E-MAKE UP CONNECTIONS TO 1-1/4" OD WASTE TRAP ASSEMBLY (5) PROVIDED.
- F-FLUSH SUPPLY LINES THOROUGHLY BEFORE CONNECTING SUPPLY INLETS (6).
- G-TEST OPERATION OF BUBBLERS BY DEPRESSING BUTTONS AND ADJUST THE FLOW RATE AS REQUIRED. SEE DETAIL A. CHECK ALL CONNECTIONS AND WASTE PIPING FOR LEAKS. CORRECT IF PRESENT.
- H-INSTALL ACCESS PANEL (2) TO COMPLETE THE INSTALLATION.

	MURDOCK-SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746  OVAL BOX WALL MOUNTED 18" LONG DRINKING FOUNTAIN -FG				
	Phone: (800) 591-9880 www.murdock-supersecur.com	MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER	
		JANUARY 2006	09/27/05		
		TO PRESENT	DATE REVISED	9938-020-001	
22		10 I HEOLITI	03/04/16		



ROUGH-IN FOR 3/8" OD PUSH-IN SUPPLY INLET, STRAIGHT STOP RECOMMENDED. \*1/4" NCT x 2" LONG TUBE STUB OUT PROVIDED.


ROUGH-IN FOR 1-1/4" OD P-TRAP WASTE OUTLET.

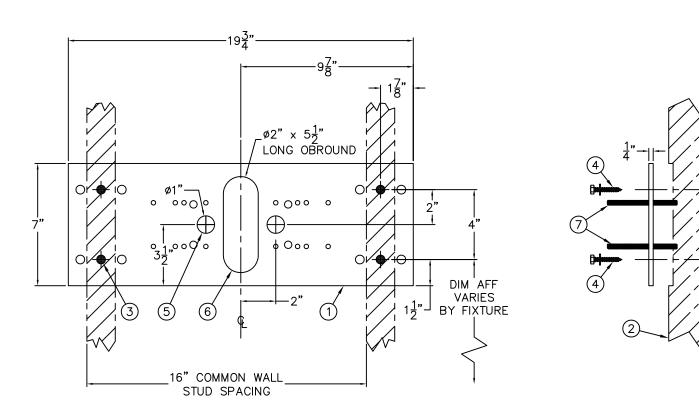


## **INSTALLATION INSTRUCTIONS:**

- A-PLATE ① INTENDED TO BE RECESSED FLUSH WITH SUPPORT FRAMING ② PROVIDED BY INSTALLER. FRAME & BLOCK OUT SUPPORT USING DIMENSIONS SHOWN. FRAME SHOULD SUPPORT 300 LBS MINIMUM.
- B-MOUNTING PLATE ① IS 1/4" THICK AND INCLUDES 12, 1/2" DIAMETER PUNCHING FOR ANCHORING HARDWARE BY OTHERS.
- C-STRIKE A HORIZONTAL CHALK LINE TO LOCATE BOTTOM MOUNTING HOLES ③. REFERENCE DISCHARGE HEIGHT REQUIREMENTS FOR YOUR MODEL AND FACILITY TO DETERMINE CORRECT HEIGHT AT FINISHED FLOOR (AFF).

 - D-AFTER POSITIONING PLATE CORRECTLY, FIX PLATE TO WALL USING APPROPRIATE, INSTALLER PROVIDED ANCHORING HARDWARE 4.
- E-MAKE UP APPROPRIATE SUPPLY (5) AND WASTE (6) ROUGHS THROUGH MOUNTING PLATE OPENINGS. A STRAIGHT SUPPLY STOP IS RECOMMENDED.
- F-REFER TO FIXTURE INSTALLATION SHEETS TO LOCATE 5/16" THREADED STUDS MOUNTING HARDWARE AND THREAD STUDS (7) THRU PLATE SO THAT A MINIMUM OF 1-1/4" OF THREAD PROJECTS BEYOND THE FINISHED WALL MATERIAL.
- G-PROTECT THREADED STUDS (7), SUPPLY (5) AND WASTE (6) ROUGHS WHILE FINISHING WALL.



**REPAIR PARTS DRINKING FOUNTAINS** 

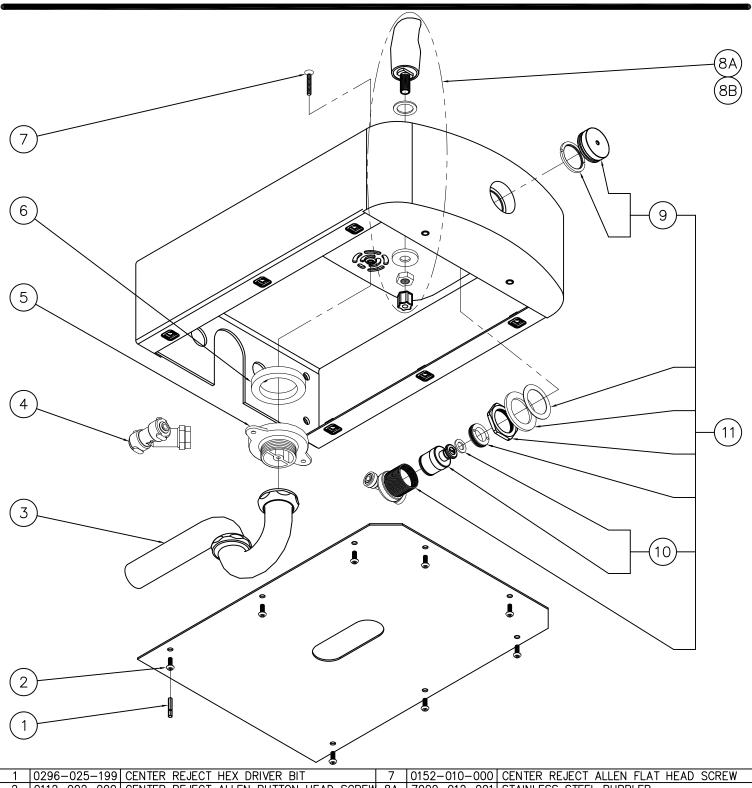

1	0296-025-199	CENTER REJECT HEX DRIVER BIT	7	0152-010-000	CENTER REJECT ALLEN FLAT HEAD SCREW
		CENTER REJECT ALLEN BUTTON HEAD SCREW	88	7000-012-001	STAINLESS STEEL BUBBLER
		1-1/4" OUTER DIAMETER P-TRAP	8B	7000-099-002	FLEXIBLE BUBBLER ASSEMBLY
4	7000-021-001	"Y" STRAINER	9	7000-068-001	RETAINING RING & BUTTON ASSEMBLY
5	7000-005-199	DRAIN ADAPTER	10	7000-069-001	VALVE CARTRIDGE WITH FOAM WASHER
6	7000-006-000	FLAT DRAIN ADAPTER GASKET	11	7000-065-001	RECESSED PUSHBUTTON VALVE ASSEMBLY
ITE	M PART NUMBER	DESCRIPTION	ITEM	PART NUMBER	DESCRIPTION

MURDOCK—SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 Phone: (800) 591–9880 www.murdock—supersecur.com MANUFACTURE DATE

# 14 GAGE OVAL BOX DRINKING FOUNTAIN

**JANUARY 2006** TO PRESENT

DATE ISSUED DRAWING NUMBER 10/21/05 DATE REVISED 03/04/16

9938-020-500




### INSTALLATION INSTRUCTIONS

## STANDARD PUSH PAD / PUSH BUTTON DRINKING FOUNTAIN

## **CONDITION:**

## SOLUTION:

# NO WATER FLOW:

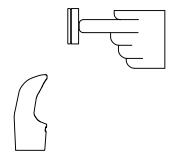

- 1.1 Check water main supply open.
- 1.2 Inspect stop (by others) open & no debris.
- 1.3 Inspect in-line strainer for debris clean.
- 1.4 Replace valve cartridge.


# WATER DRIPS / WILL NOT SHUT OFF:



- 2.1 For push pad activated drinking fountains only:

  Open fixture and move valve bracket assembly further back from push pad.
- 2.2 Replace valve cartridge.

#### REDUCED WATER FLOW:

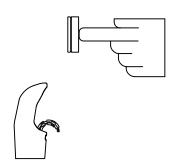

- 3.1 Adjust the valve flow rate. See appropriate fixture installation instructions.
- 3.2 Check water main supply for 20 psig minimum flow pressure.
- 3.3 Inspect stop (by others) open & no debris.
- 3.4 Inspect in-line strainer for debris clean.
- 3.5 Inspect bubbler for debris clean.
- 3.6 Inspect all tubing for twists or kinks.
- 3.7 Replace valve cartridge.

1 (r ~ () ) !	MURDUCK-SUPER SECURI
	P.O. Box 3527 Industry, CA 91744
2 × 1	MURDUCK—SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746
	Phone: (800) 591—9880
and coding ,	www.murdock-supersecur.com
I	

#### DRINKING FOUNTAIN VALVE MAINTENANCE INSTRUCTIONS

MANUFACTURE DATE DATE ISSUED DRAWING NUMBER

JANUARY 2006 09/28/05

TO PRESENT DATE REVISED 03/02/16

9940-200-001